



MISCELLANEOUS ILLUSTRATED PARTS

TABLE OF CONTENTS

The figures and lists which follow include some miscellaneous piece parts that can be purchased separately from Apple, along with their part numbers. Refer to your Apple Service Programs manual for prices.

Contents:

Hand Controller.....	1.1
Joystick Assembly.....	1.3

[illegible]

FIGURE 1 - HAND CONTROLLER

Item	Part No.	Description
1	590-0132	Cable, Hand Controllers, IIe
2	590-0120	Cable Assy, Hand Controllers II
3	705-0072	Hand Controller, Pushbutton Switch
4	109-0430	Hand Controller, Potentiometer

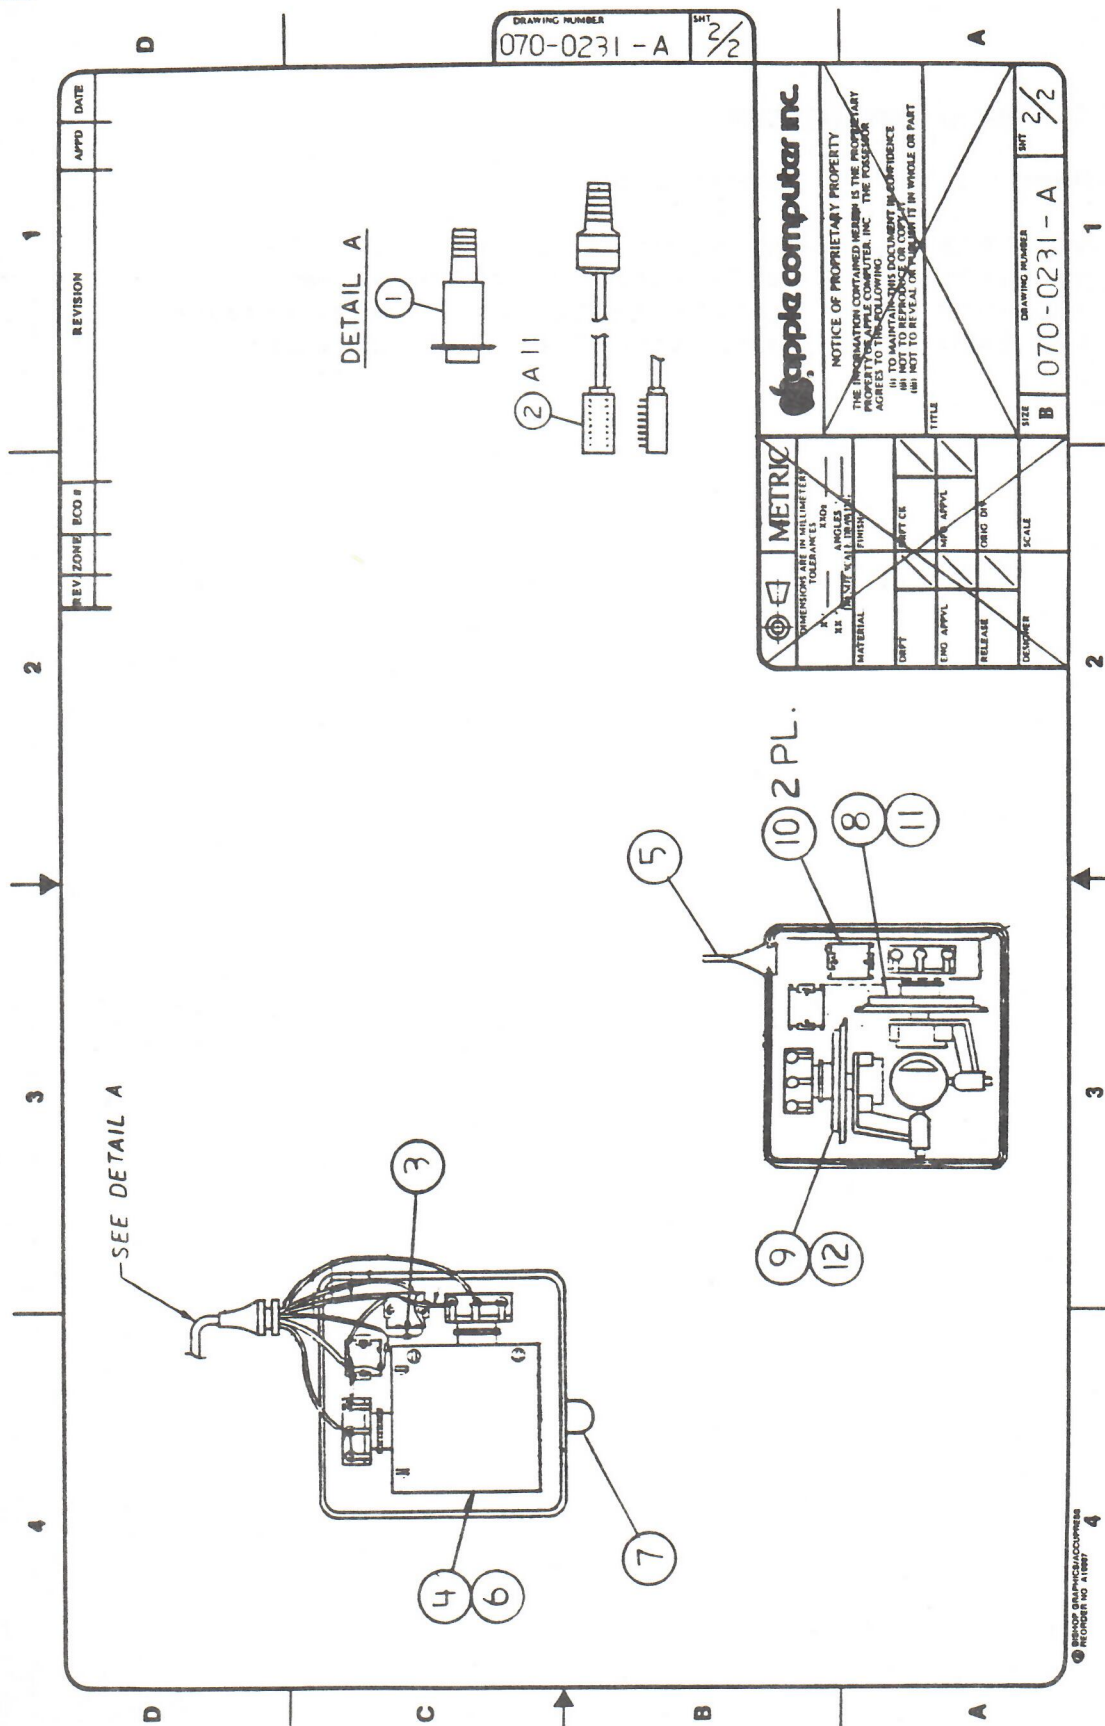


FIGURE 2 - JOYSTICK ASSEMBLY

Item	Part No.	Description
1	590-0131	Cable, Joystick IIe
2	590-0135	Cable Assy, Joystick II
3	101-4271	Joystick, Resistor, 270 ohm
4	699-0097	Gimbal Assy, Joystick
5	590-0142	Cable, Cursor ///
6	699-0167	Gimbal Assy, Cursor ///
7	970-0529	Joystick & Knob Assembly
8	970-0530	Sideplate "A" (including pot), Cursor ///
9	970-0531	Sideplate "B" (including pot), Cursor ///
10	970-0536	Switch Rocker (CH J-1726), Cursor /// and Joystick II
11	970-0532	Sideplate "A" (including pot), Joystick II
12	970-0533	Sideplate "B" (including pot), Joystick II

